

Installing your new **Snap-A-Tap™**



Pull down to disengage lever.



Remove **Snap-A-Tap** lever.



Remove lever collar from faucet. This will not be needed for Snap-A-Tap



Remove lever bonnet.



Remove faucet lever.



Remove both friction washer (black) and ball washer (white).



Install ball washer on **Snap-A-Tap** lever.



Install friction washer on **Snap-A-Tap** lever.



Place **Snap-A-Tap** lever in faucet body making sure lower part of lever engages with slot in faucet.



Reinstall lever bonnet.



Pull down on **Snap-A-Tap** and slide over faucet lever.



Snap-A-Tap will snap into place when aligned with faucet lever.